


Link Mfg. Ltd.
223 15th St. N.E.
Sioux Center, IA USA
51250-2120
www.linkmfg.com

**QUESTIONS?
CALL CUSTOMER
SERVICE
1-800-222-6283**

INSTALLATION INSTRUCTIONS

**CS120 (2908A000)
CS140 (2908B000)**

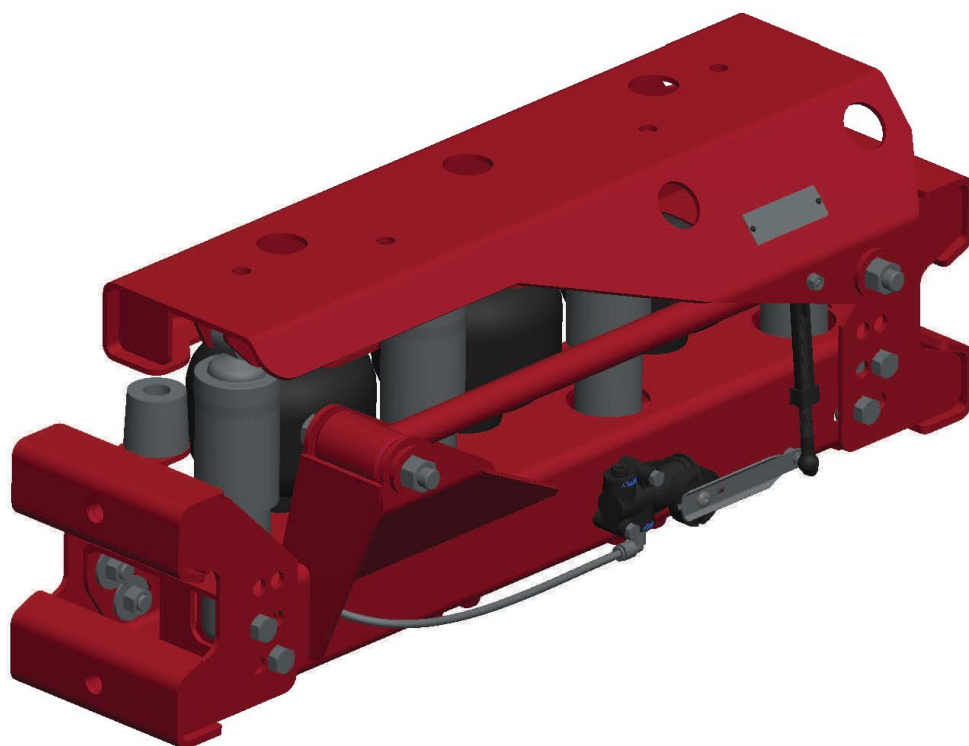

The **CABMATE MODEL CS120 and CS140** fit most custom-built sleepers.

CS120 UNIT WEIGHT: 91.9 LB.
CS140 UNIT WEIGHT: 93.2 LB.

CABMATE MODEL CS120 & CS140




Review the Parts List on page 3 to become familiar with the different components of the CABMATE.

IMPORTANT: Due to many chassis' variables caused by installation of special equipment or options, the fit of the CABMATE CS120 & CS140 may be affected and should be evaluated before beginning installation.

IMPORTANT: Installation of the CABMATE system will allow the sleeper to move freely. Before starting installation, check clearances between the sleeper and any objects the sleeper may contact when it moves (1 1/2 inches of clearance should be sufficient).


NOTE: The CABMATE is designed to be a universal fit and will require some frame drilling and modifications to the sill of the sleeper. This CABMATE should be installed by a professional.

- A. Drill the mount holes in the bottom mounting sill of the sleeper to the dimensions shown (**FIG. 1**), centered between the frame rails.
- B. Drill the mount holes in the frame rails to the dimensions shown (**FIG. 2**). Make sure the sleeper is level with the frame, and the CABMATE is aligned vertically.
- C. Disassemble the Frame Mount Brackets (No. 26 on the Parts List) from the unit and securely install them to the frame rails using 5/8" grade 8 bolts (not supplied).
- D. With the Lateral Control Rod to the rear of the truck, slide the unit down between the frame rails and into the Frame Mount Brackets. Loosely fasten the unit to the Frame Mount Brackets using supplied hardware.
- E. Securely fasten the unit to the sleeper using 1/2" grade 8 bolts (not supplied). Securely tighten 1/2" fasteners to the Frame Mount Brackets
- F. **IMPORTANT:** After plumbing and height control adjustments are completed, temporarily adjust the CABMATE to its maximum upward position. There must be a minimum of 1/4" gap between the cab and the sleeper.

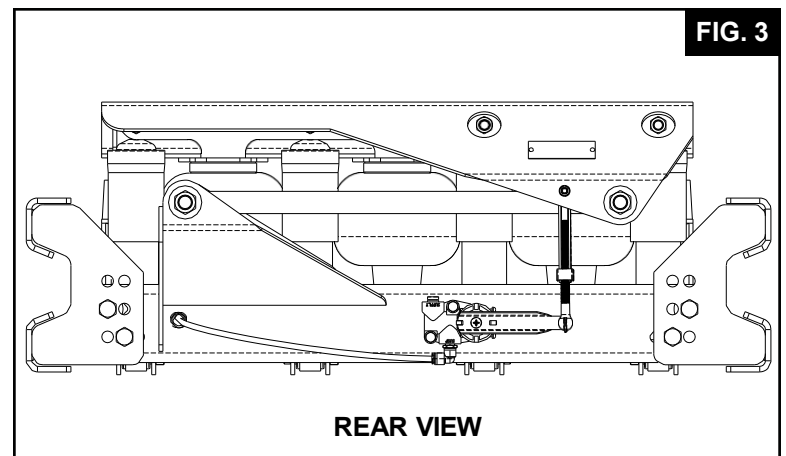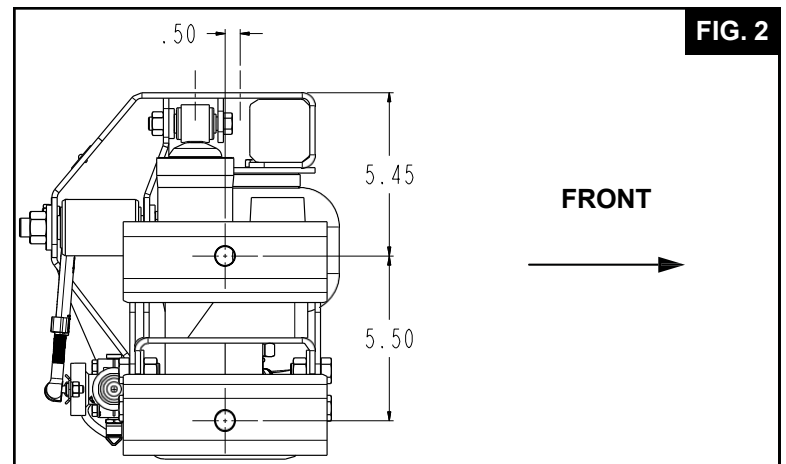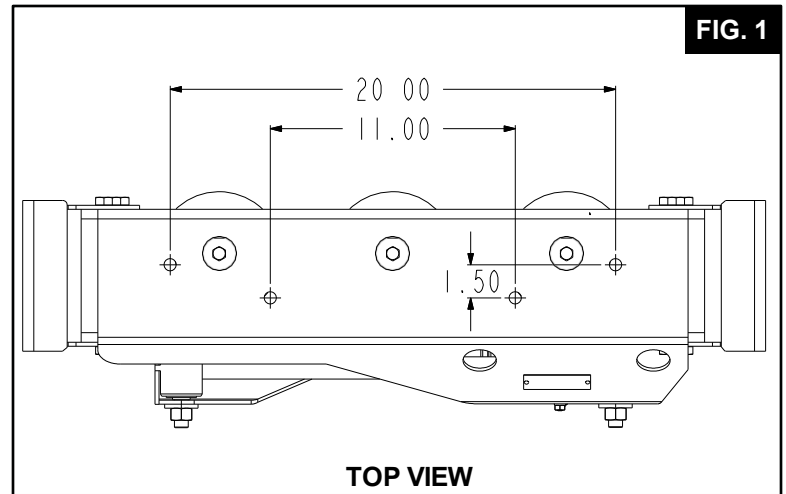

PLUMBING INSTRUCTIONS

WARNING: FOR SAFETY PURPOSES THE CABMATE MUST BE SUPPLIED FROM A PRESSURE PROTECTED CIRCUIT. IN THE EVENT OF AN AIR LEAK IN THE CAB SUSPENSION, FAILURE TO PROVIDE A PRESSURE PROTECTED CIRCUIT MAY CAUSE LOSS OF AIR PRESSURE TO VITAL SYSTEMS ON THE VEHICLE.

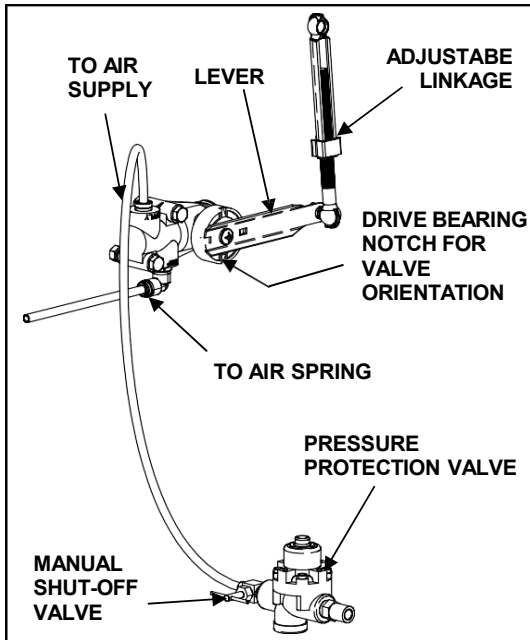

WARNING: LOSS OR APPLICATION OF AIR PRESSURE TO CABMATE WILL CAUSE SUDDEN MOVEMENT OF THE CAB. PRIOR TO INSTALLING OR PERFORMING MAINTENANCE, BLOCK UP THE CABMATE TO PREVENT THE POSSIBILITY OF INJURY.

WARNING: CONNECT THE CABMATE DIRECTLY TO THE MAIN AIR TANK. YOU WILL NEED AN AIR PRESSURE PROTECTION VALVE IN THE LINE. (INCLUDED IN THE PRESSURE PROTECTION KIT. LINK MFG. PART NO. 13500000). DO NOT USE AN AIR PRESSURE REGULATOR!

A. With the tank at 0 p.s.i., remove the existing plug or fitting from the desired port.

B. Apply joint compound to the fittings and install the pressure protection kit. DO NOT USE TEFLON TAPE. Be sure that the arrows on the valve are pointing in the direction of air flow and the vent hole is pointed down. NOTE: Additional fittings/reducers may be required to attach the hex nipple to the main air tank.

C. Run the 1/4" airline from the shut-off valve to the CABMATE. Be sure that the airline has enough clearance so that there are no pinch points that may restrict or cut the airline. Secure the airline using the cable ties supplied by Link Mfg.

D. Tighten all plumbing fittings. Then, with the system at operating pressure (90 to 110 p.s.i.), open the Manual Shut-off Valve to supply air to the CABMATE. Check the system for air leaks.


E. Check for proper operation of the height control valve. Disconnect the valve linkage from the lever. Push the lever **down** 45°, air should flow into the air spring(s). Return the lever to the neutral position. Push the lever **up** 45°, air should exhaust from the air spring(s). Return the lever to the neutral position; no air should flow. Reconnect the valve linkage to the lever.

HEIGHT ADJUSTMENTS

Measure the design height of the air spring(s). The height should be **5 1/2** inches ± 1/16. To change the height, disconnect one end of the valve linkage and adjust accordingly. Tighten the lock nuts on the valve linkage. The valve arm has a slot which will allow for coarse adjustment also. (See diagram above.)

MAINTENANCE


CABMATES need no lubrication and little maintenance. The following components should be checked at the time the truck is being serviced. However, immediate corrective action should be taken if a serious malfunction occurs.

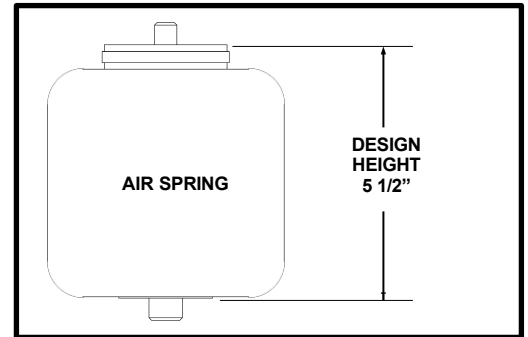

COMPONENT	POSSIBLE PROBLEM	CORRECTIVE ACTION	TORQUE
Airlines	Air leaks	Replace airline	Compression Nut Hand Tight + 1 Turn
Fittings	Air leaks	Remove fitting and apply fresh joint compound. Reinstall fitting, but Do Not Overtighten. Do not use teflon tape.	Threaded into: Metal 15 Ft. Lbs. Plastic Hand Tight + 1 Turn
Air Springs	A. Improper height B. Air leakage	A. Adjust valve linkage to maintain proper air spring height. B. Replace air spring.	Size 3/8 25 Ft. Lbs 1/2 28 Ft. Lbs 3/4 30 Ft. Lbs Metal 04 Ft. Lbs Plastic 10 Ft. Lbs
Height Control Valve*	Air spring(s) will not inflate when weight is added to the cab; OR Air spring(s) will not deflate when weight is removed from the cab.	A. Inspect valve to ensure drive bearing notch is located on "SUSP" port side of valve. If not, loosen lever screw (but do not remove completely) and pull lever loose from drive bearing, rotate drive bearing until the bearing notch is in the correct position and resecure lever by tightening lever screw. B. Replace Valve	1/4 Mount Fasteners 10 Ft. Lbs. Bearing Screw 40-50 InLbs.
Shock Absorber	Insufficient dampening effect	Replace shocks	45 Ft. Lbs.
Lateral Control Rod	A. Loose nuts on lateral control rod bolts B. Worn bushings.	A. Tighten securely to clamp the inner sleeve. B. Replace lateral control rod.	40 Ft. Lbs.


IMPORTANT: Periodically check the tightness of all fasteners.

980125
CV600A

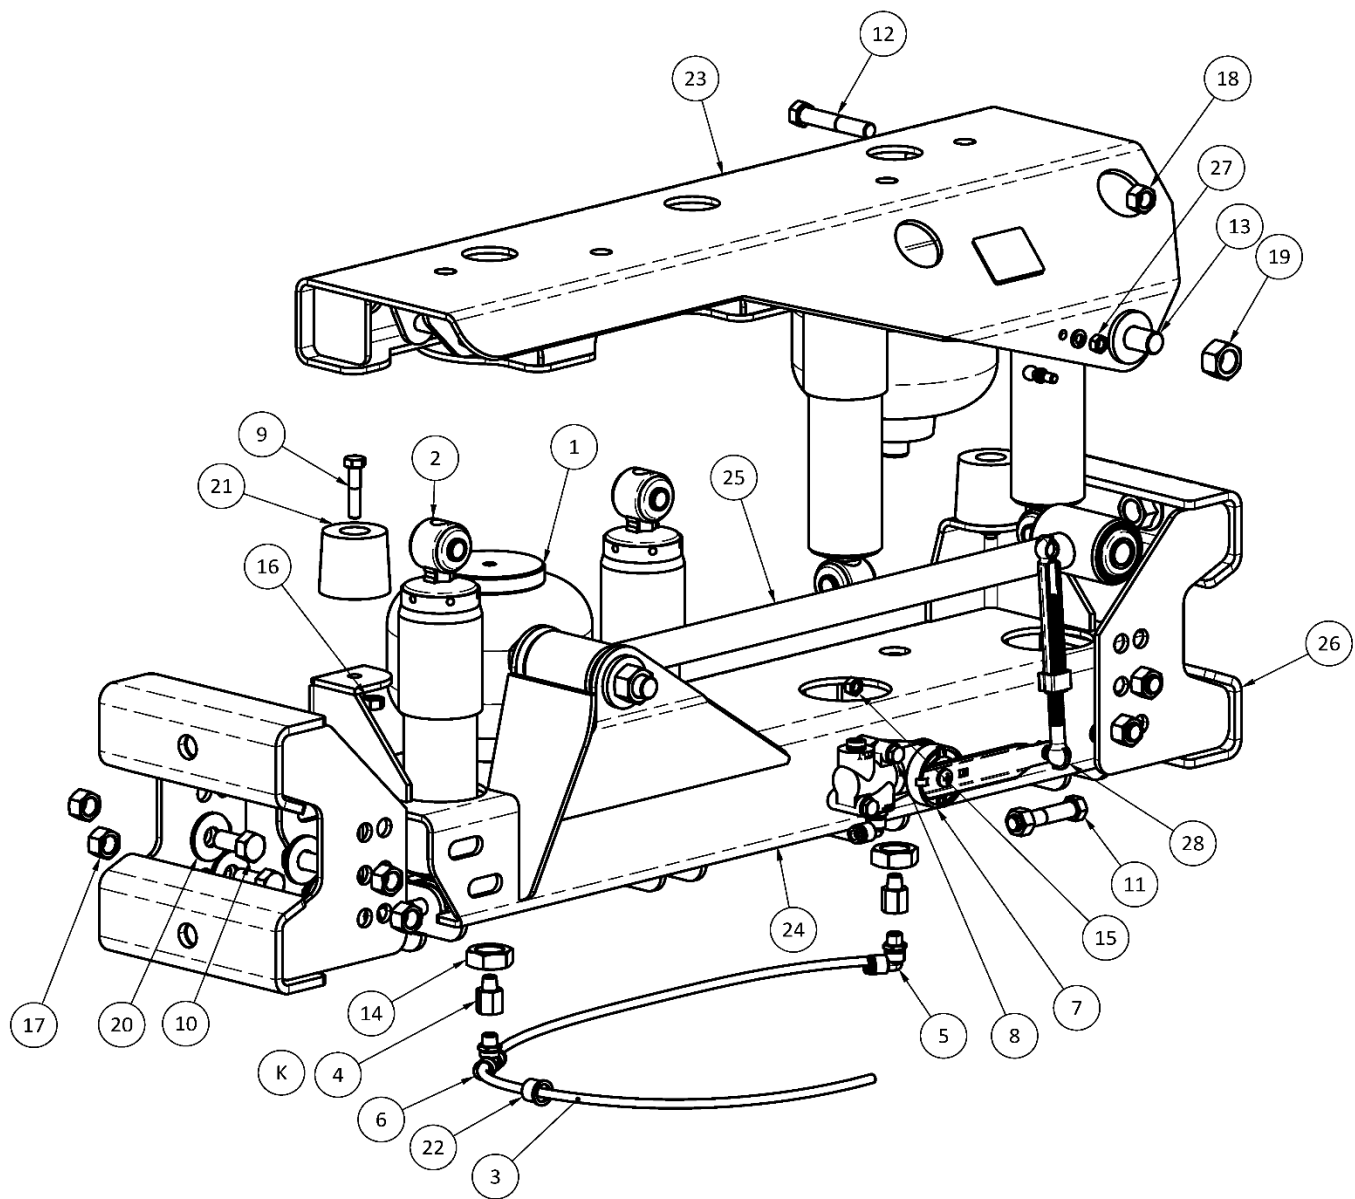

CABMATE® MODEL CS120 PARTS LIST

ITEM	PART #	DESCRIPTION	QTY	ITEM	PART #	DESCRIPTION	QTY
1	11020074	SPRING-AIR	2	15	14760800	1/4 UNC HEX CTR LOCK NUT (GR B)	2
2	12040003	SHOCK ABSORBER	4	16	14761000	5/16 UNC HEX CTR LOCK NUT (GR B)	2
3	13020090	AIRLINE-NYLON, .250 O.D., BULK (FEET)	2.8	17	14761600	1/2 UNC HEX CTR LOCK NUT (GR B)	8
4	13022080	RESTRICTOR FITTING	2	18	14771400	7/16 UNF HEX CTR LOCK NUT (GR B)	8
5	13025203	ELBOW, 1/4 TB 1/8 M-NPT	2	19	14772001	5/8 UNF HEX TOP LOCK NUT (GR C)	2
6	13025206	BRANCH TEE, 1/4 TB 1/8 M-NPT	1	20	14871600	1/2 TYPE A PLAIN WASHER	8
-	13500000	KIT-PROTECTION, PRESSURE	1	21	15000070	BUMPER-JOUNCE, 1.75	2
7	13500113	SERVICE KIT-HEIGHT CONTROL VALVE	1	22	15000303	SNAP BUSHING (.250 MAT'L)	1
8	14010814	1/4 X 1 3/4 UNC HEX CAP SCR (GR 5)	2	23	29081000	BRACKET-MOUNT, CAB	1
9	14011012	5/16 X 1 1/2 UNC HEX CAP SCR (GR 5)	2	24	29081001	BRACKET-SUPPORT, CROSSMEMBER	1
10	14011608	1/2 X 1 UNC HEX CAP SCR (GR 5)	8	25	29081003	LATERAL CONTROL ROD	1
11	14031418	7/16 X 2 1/4 UNF HEX CAP SCR (GR 5)	4	26	29081004	BRACKET-MOUNT, FRAME	2
12	14031420	7/16 X 2 1/2 UNF HEX CAP SCR (GR 5)	4	27	29910026	SERVICE KIT-PIVOT BALL	2
13	14042036	5/8 X 4 1/2 UNF HEX CAP SCR (GR 8)	2	28	29910052	KIT-LINKAGE, LONG	1
14	14752400	3/4 UNF HEX JAM NUT	2	29	39081000	KIT-DOCUMENT, CS120 & CS140	1

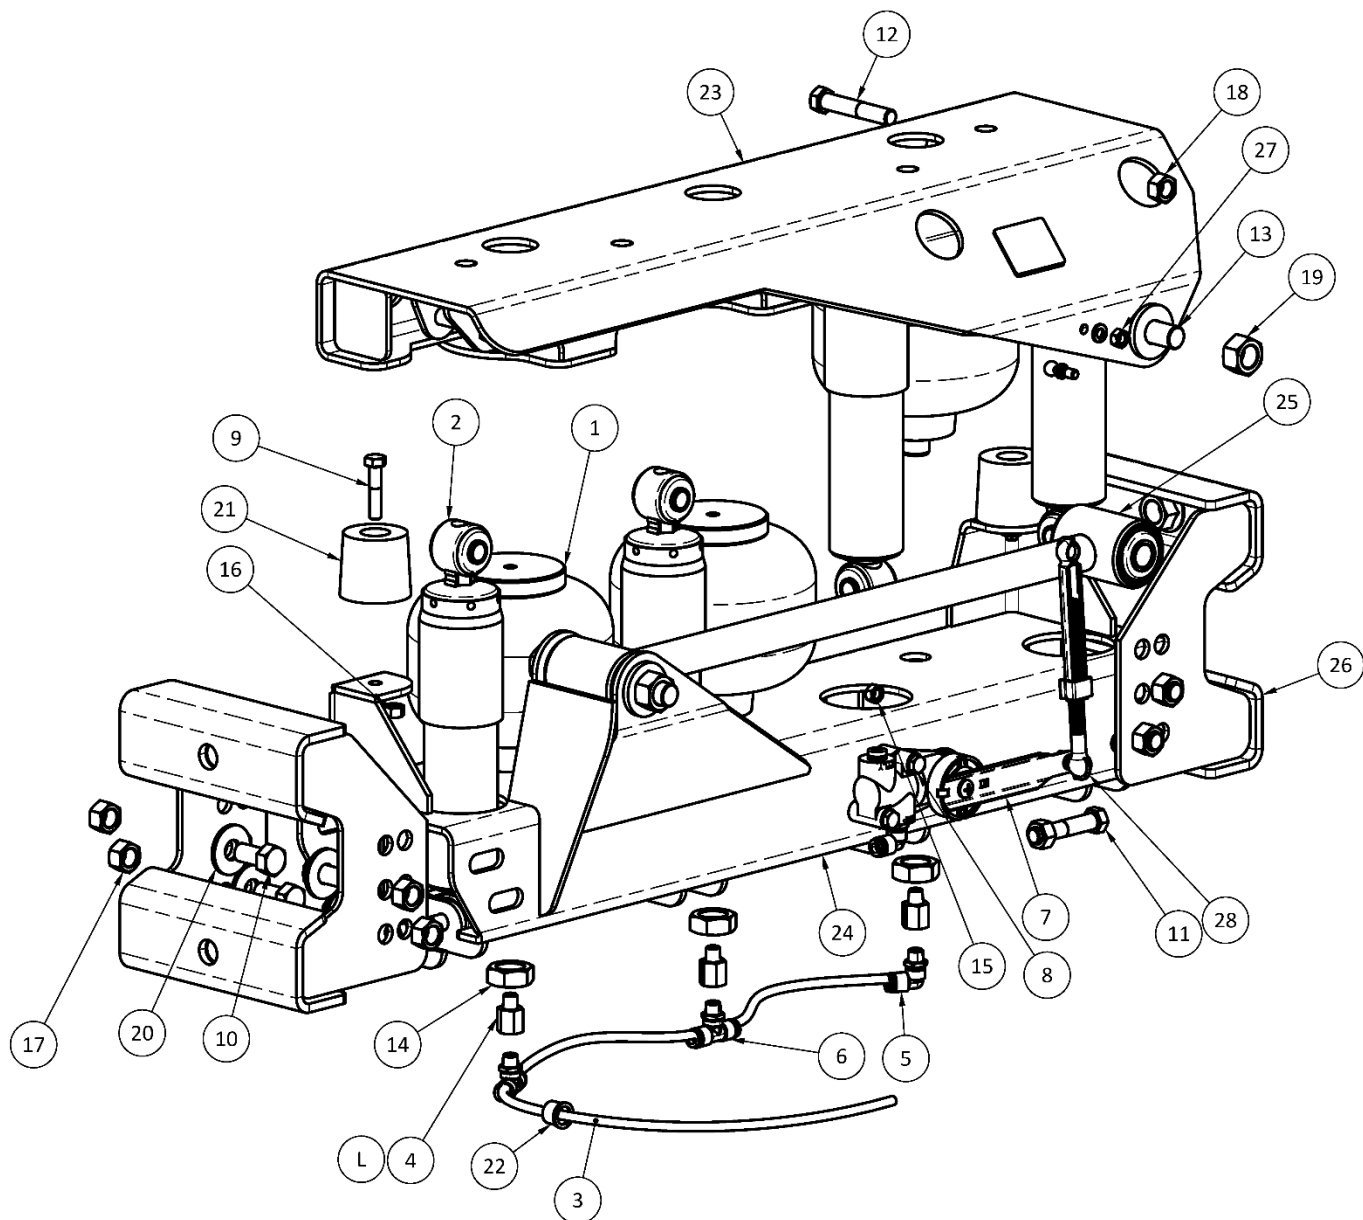

CABMATE® MODEL CS140 PARTS LIST

ITEM	PART #	DESCRIPTION	QTY	ITEM	PART #	DESCRIPTION	QTY
1	11020074	SPRING-AIR	3	15	14760800	1/4 UNC HEX CTR LOCK NUT (GR B)	2
2	12040003	SHOCK ABSORBER	4	16	14761000	5/16 UNC HEX CTR LOCK NUT (GR B)	2
3	13020090	AIRLINE-NYLON, .250 O.D., BULK (FEET)	2.8	17	14761600	1/2 UNC HEX CTR LOCK NUT (GR B)	8
4	13022080	RESTRICTOR FITTING	3	18	14771400	7/16 UNF HEX CTR LOCK NUT (GR B)	8
5	13025203	ELBOW, 1/4 TB 1/8 M-NPT	2	19	14772001	5/8 UNF HEX TOP LOCK NUT (GR C)	2
6	13025206	BRANCH TEE, 1/4 TB 1/8 M-NPT	2	20	14871600	1/2 TYPE A PLAIN WASHER	8
-	13500000	KIT-PROTECTION, PRESSURE	1	21	15000070	BUMPER-JOUNCE, 1.75	2
7	13500113	SERVICE KIT-HEIGHT CONTROL VALVE	1	22	15000303	SNAP BUSHING (.250 MAT'L)	1
8	14010814	1/4 X 1 3/4 UNC HEX CAP SCR (GR 5)	2	23	29081000	BRACKET-MOUNT, CAB	1
9	14011012	5/16 X 1 1/2 UNC HEX CAP SCR (GR 5)	2	24	29081001	BRACKET-SUPPORT, CROSSMEMBER	1
10	14011608	1/2 X 1 UNC HEX CAP SCR (GR 5)	8	25	29081003	LATERAL CONTROL ROD	1
11	14031418	7/16 X 2 1/4 UNF HEX CAP SCR (GR 5)	4	26	29081004	BRACKET-MOUNT, FRAME	2
12	14031420	7/16 X 2 1/2 UNF HEX CAP SCR (GR 5)	4	27	29910026	SERVICE KIT-PIVOT BALL	2
13	14042036	5/8 X 4 1/2 UNF HEX CAP SCR (GR 8)	2	28	29910052	KIT-LINKAGE, LONG	1
14	14752400	3/4 UNF HEX JAM NUT	3	29	39081000	KIT-DOCUMENT, CS120 & CS140	1



LINK MANUFACTURING, LTD.
223 15TH ST. NE, SIOUX CENTER, IA 51250
1-800-222-6283 www.linkmfg.com